


ID No. 3KP-BL7-RS-I-3-202310 Version No. 01

Version date: 10.2023


Page 1 of 4

1. Identification / recognition

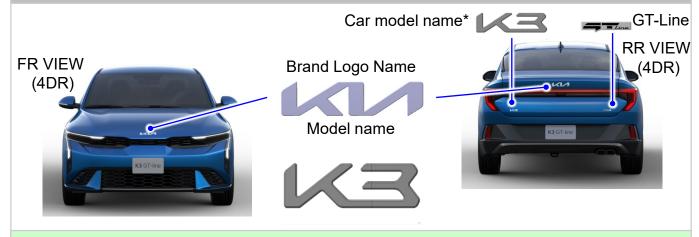


2. Immobilisation / stabilisation / lifting




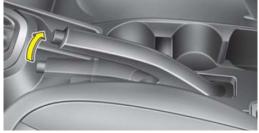



Pull up the parking brake as far as possible

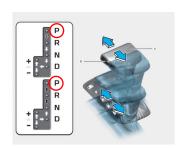

 For automatic transmission: Move shift lever to parking position (P)



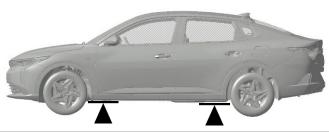

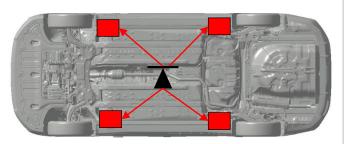

3. Disable direct hazards / safety regulations

Low Voltage 12V battery:



Access:



Pull the release lever to unlatch the hood. The hood should pop open

hood should pop of **Disabling:** slightly.



Raise the hood slightly, push the secondary latch up (1) inside of the hood center and lift the hood (2)



000 000

Turn the

Turn the ignition switch off



Access to battery shown above



Disconnect the negative(-) terminal



Disconnect the positve(+) terminal

ID No. 3KP-BL7-RS-I-3-202310 Version No.

Version date:


Page 2 of 4

4. Access to the occupants

Steering column adjustment:




Glass:

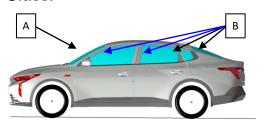


A, Laminated glass.


B, tempered glass

  Seat adjustment:







MANUAL

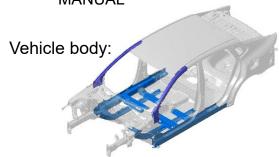

Hardened Steel:

 5. Stored energy / liquids / gases / solids

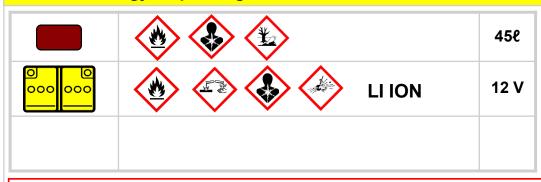



550 ± 25g







WHEN COOLANT LEAKS FROM THE BATTERY PACK, IT CAN BECOME UNSTABLE WITH RISK OF THERMAL RUNAWAY. CHECK BATTERY PACK TEMPERATURE WITH THERMAL IMAGING CAMERA



6. In case of fire



BATTERY RE-IGNITION!



7. In case of submersion




Do not touch any electrical components or cables, as doing so poses an electrocution hazard. Work on the vehicle only after the vehicle has been pulled out of the water.




ID No.	Version No.	Version date:	Page
3KP-BL7-RS-I-3-202310	01	10.2023	3 of 4

8. Towing / transportation / storage

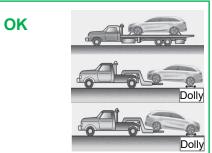

Notice: The use of wheel dollies or flatbed is recommended. Use a wheel lift or flatbed equipment.

 Not OK



Notice: Do not tow with slingtype equipment (1). Do not tow the vehicle with the front wheels on the ground as this may cause damage to the vehicle (2).

Front



Rear



Towing hook is located in the tailgate tool box

10. Explanation of pictograms used

B	Gasoline vehicle		Fuel tank content gasoline/ethanol		Bonnet
	General warning sign	*	Air-conditioning component		Boot
	Corrosives		Hazardous to the human health		Flammable
	Explosive		Acute toxicity	*	Environmental hazard
□ IR ∭	Use thermal Infrared camera				