



Proceed

Quick Reference Guide

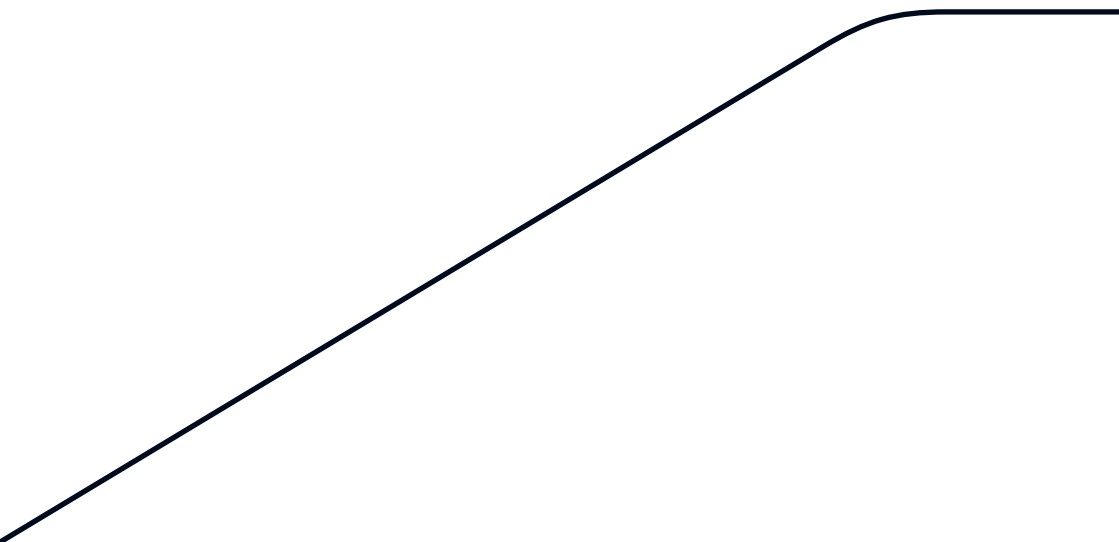

Movement that inspires

Interior Overview

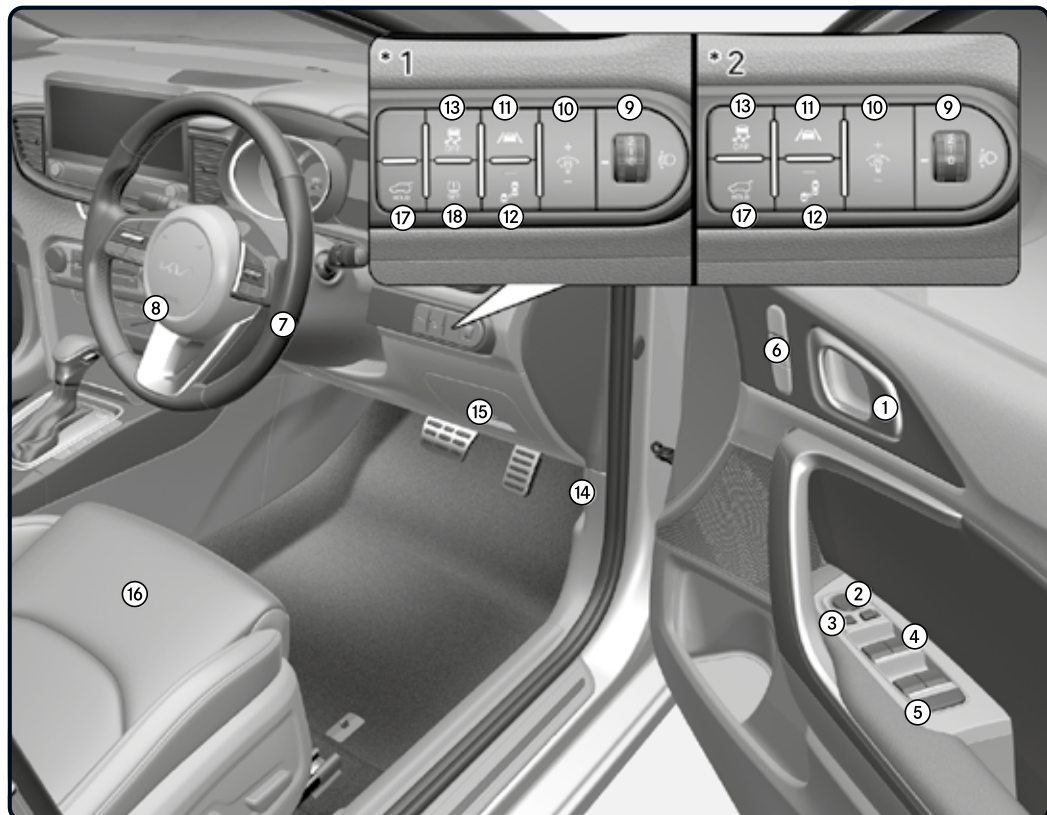


- | | | |
|--|--|---|
| ① Inside door handle [4] | ⑦ Steering wheel [4] | ⑭ Bonnet release lever [4] |
| ② Outside rear view mirror control [4] | ⑧ Tilt and telescopic steering control lever [4] | ⑮ Inner fuse panel [8] |
| ③ Outside rear view mirror folding [4] | ⑨ Headlight leveling device [4] | ⑯ Seat [3] |
| ④ Power window switch [4] | ⑩ Instrument panel illumination control [4] | ⑰ Power tailgate open/close button [4] |
| ⑤ Power window lock button [4] | ⑪ Lane safety button [6] | ⑱ TPMS (Tyre Pressure Monitoring System) SET button [7] |
| ⑥ Driver position memory system button [3] | ⑫ Blind-spot safety button [6] | |
| | ⑬ ESC On/Off button [6] | |

* if equipped

[#] Number in brackets indicates chapter in Owner's Manual.
The illustrations in this guide may vary from the actual vehicle.


Instrument Panel Overview

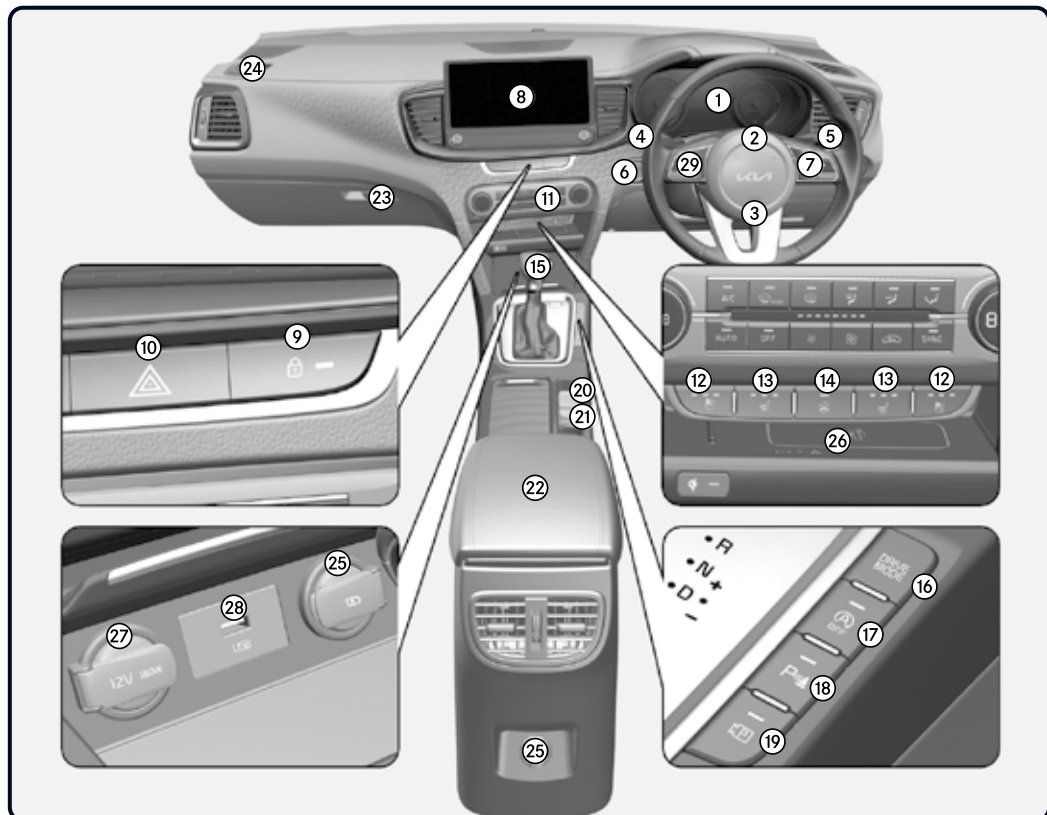

- | | | |
|--|---|---|
| ① Instrument cluster [4] | ⑪ Climate control system [4] | ⑳ Centre console storage box [4] |
| ② Horn [4] | ⑫ Air ventilation seat [4] | ㉑ Glove box [4] |
| ③ Driver's front air bag [3] | ⑬ Seat warmer [4] | ㉒ Passenger's front air bag [3] |
| ④ Light control/Turn signals [4] | ⑭ Heated steering wheel button [4] | ㉓ USB charger [4] |
| ⑤ Wiper/Washer [4] | ⑮ Shift lever [6] | ㉔ Wireless smart phone charging system [4] |
| ⑥ Ignition switch or ENGINE START/STOP button [6] | ⑯ Drive mode button [6] | ㉕ Power outlet [4] |
| ⑦ Driving assist button [6] | ⑰ ISG system Off button [6] | ㉖ USB port [5] |
| ⑧ Infotainment system screen (Refer to "Car Infotainment System Quick Reference Guide".) | ⑱ Parking safety button [4] | ㉗ Steering wheel audio controls (Refer to "Car Infotainment System Quick Reference Guide".) |
| ⑨ Central door lock button [4] | ㉒ Parking/View button [4] | |
| ⑩ Hazard warning flasher [7] | ㉓ Electronic parking brake (EPB) switch [6] | |
| | ㉔ AUTO HOLD control button [6] | |

Instrument Cluster / Engine Compartment

Instrument cluster [4]

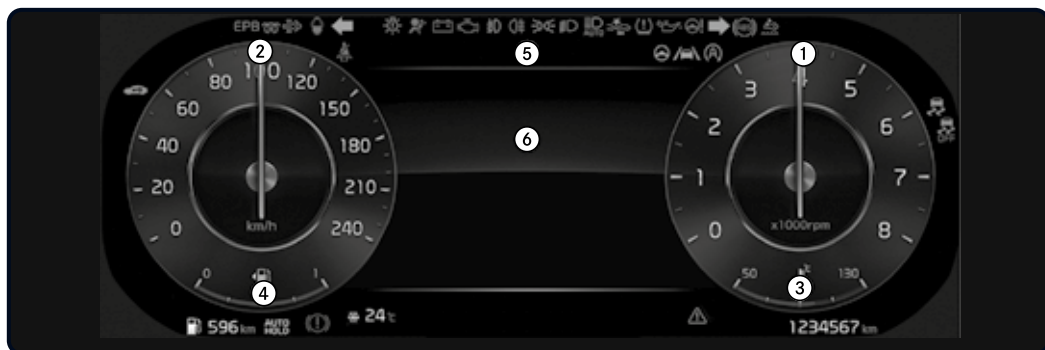


- ① Tachometer
- ② Speedometer

- ③ Engine coolant temperature gauge
- ④ Fuel gauge

- ⑤ Warning and indicator lights
- ⑥ LCD display

Smartstream G 1.5 T-GDi

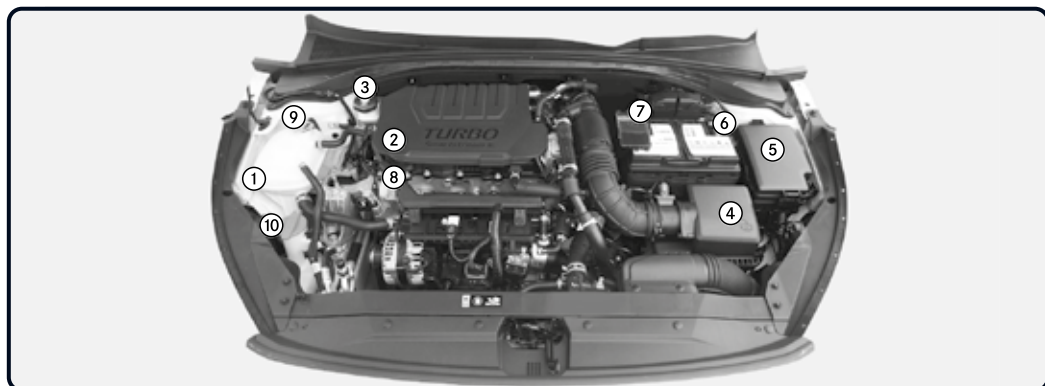


- ① Engine coolant reservoir [8]
- ② Engine oil filler cap [8]
- ③ Brake/clutch fluid reservoir [8]

- ④ Air cleaner [8]
- ⑤ Fuse box [8]
- ⑥ Negative battery terminal [8]

- ⑦ Positive battery terminal [8]
- ⑧ Engine oil dipstick [8]
- ⑨ Radiator cap [8]
- ⑩ Windscreen washer fluid reservoir [8]


Climate Control System / Windows

Automatic climate control system* [4]

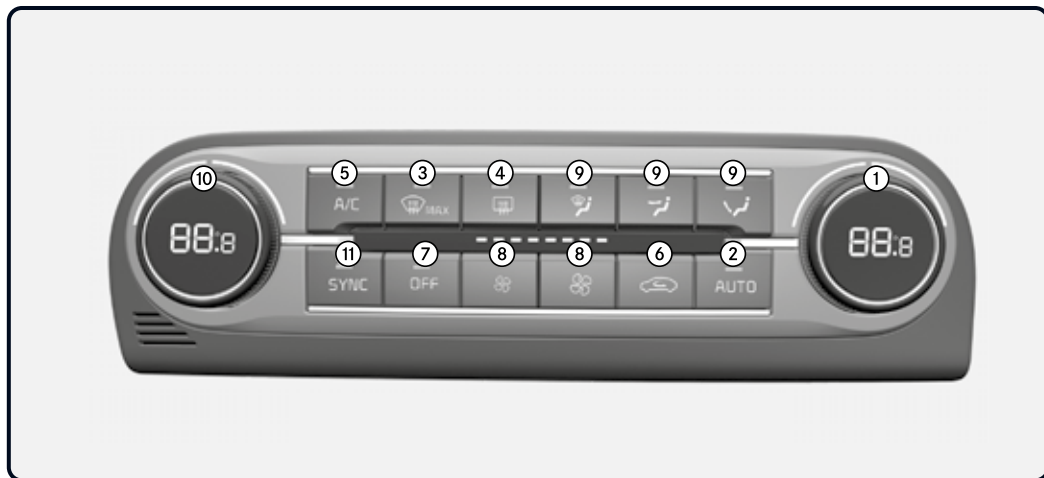

- | | | |
|--------------------------------|----------------------|-----------------------------------|
| ① Driver's temperature control | ⑤ Air conditioning | ⑨ Mode selection |
| ② AUTO (automatic control) | ⑥ Air intake control | ⑩ Passenger's temperature control |
| ③ Front windscreen defroster | ⑦ Blower OFF | ⑪ SYNC |
| ④ Rear window defroster | ⑧ Fan speed control | |


Windows [4]

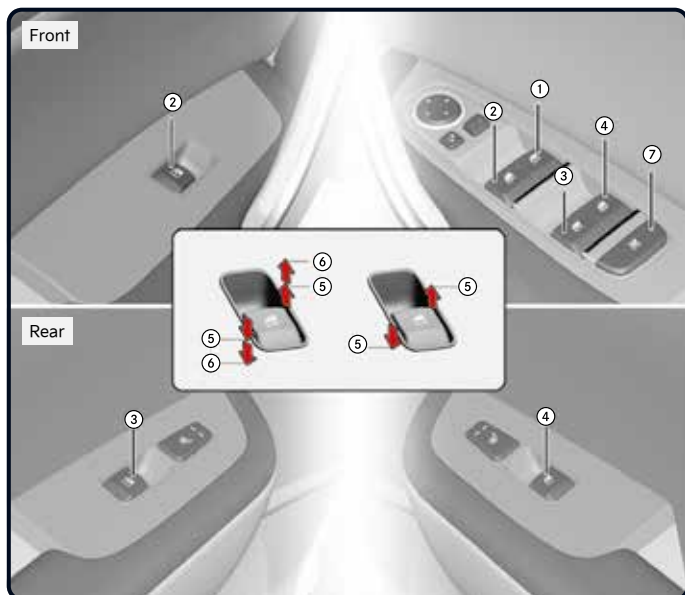

- | |
|--|
| ① Driver's door power window switch |
| ② Front passenger's door power window switch |
| ③ Rear door (left) power window switch |
| ④ Rear door (right) power window switch |
| ⑤ Window opening and closing |
| ⑥ Automatic power window up*/down* |
| ⑦ Power window lock button* |

Note: In cold and wet climates, power windows may not work properly due to freezing conditions.

Door Locks / Tailgate / Bonnet

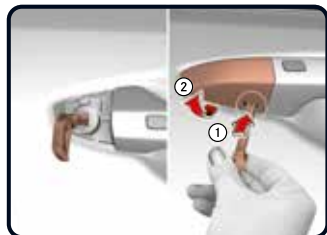


Operating door locks manually [4]

- ① Press the lever
- ② Push out the cover



Central door lock switch [4]

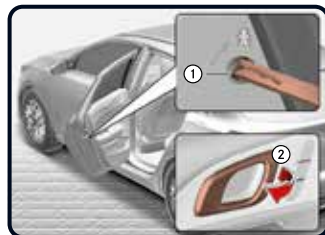

Child-protector rear door lock [4]

- ① Turn to lock position
- ② Door will not open if handle pulled



Opening the tailgate [4]



Closing the tailgate [4]



Emergency tailgate safety release [4]

- ① Push the mechanical key to the right



Smart tailgate* [4]

Activate the smart tailgate function in the user setting menu.



The smart tailgate operates with a welcome alert if the smart key is detected within 50~100 cm from the tailgate.




The hazard warning lights will blink and chime will sound 2 times and then the tailgate will slowly open.



Opening the bonnet [4]

Pull the release lever to unlatch the bonnet.

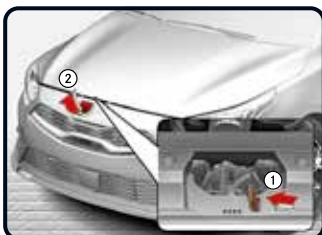


- ① Raise the bonnet slightly, push the secondary latch inside of the bonnet
- ② Lift the bonnet

Closing the bonnet

- > Before closing the bonnet, check if all filler caps are correctly installed and any other combustible material must be removed from the engine compartment.
- > Lower the bonnet until it is about 30 cm above the closed position and let it drop to securely lock in place.

Fuel Filler Door / Selective Catalytic Reduction / Wipers and Washers

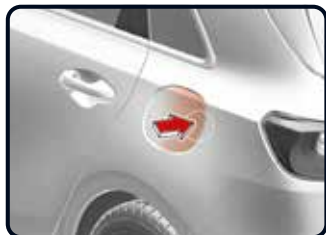

Opening the fuel filler door [4]
Press the 3 o'clock position edge of the fuel filler door.



① Fully open the door
② Turn cap counterclockwise to open

Closing the fuel filler

- > Turn the cap clockwise until it "clicks" to ensure it is securely tightened.
- > Close the fuel filler door and push on the 3 o'clock position edge of the fuel filler door lightly to make sure that it is securely closed.



Adding the urea solution* [8]



Urea solution level gauge* [8]


1. Press the ENGINE START/STOP button to the OFF position.
2. Turn the urea solution tank cap in a counterclockwise direction to open it.
3. Add the specified urea solution. Fill in a sufficient amount of urea solution.

* Only vehicles with diesel engines are equipped with Urea solution. Pay great caution not to add the urea solution into the fuel tank.

Low urea solution warning message* [8]

When "Refill Urea tank or vehicle will not start" message is displayed with SCR warning lamp (⚠), the vehicle can't be restarted once the engine is turned off by the ENGINE START/ STOP button. For the above cases, full replenishment is always recommended.

Wipers and Washers [4]

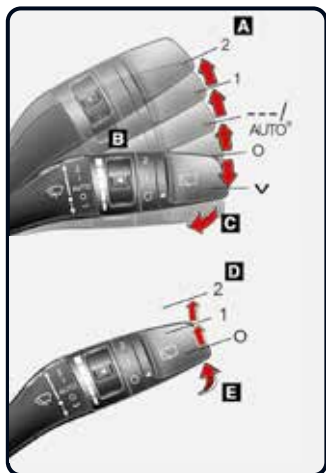

A: Wiper speed control (front)

- 2 High wiper speed
- 1 Low wiper speed
- Intermittent wipe
- AUTO* Auto control wipe
- O Off
- ∨ Single wipe

B: Intermittent control wipe time adjustment


C: Wash with brief wipes (front)*

D: Rear wiper/washer control*

- 2 Continuous wipe
- 1 Intermittent wipe
- O Off

E: Wash with brief wipes (rear)*

Seat / Air Bag / Child Restraint System

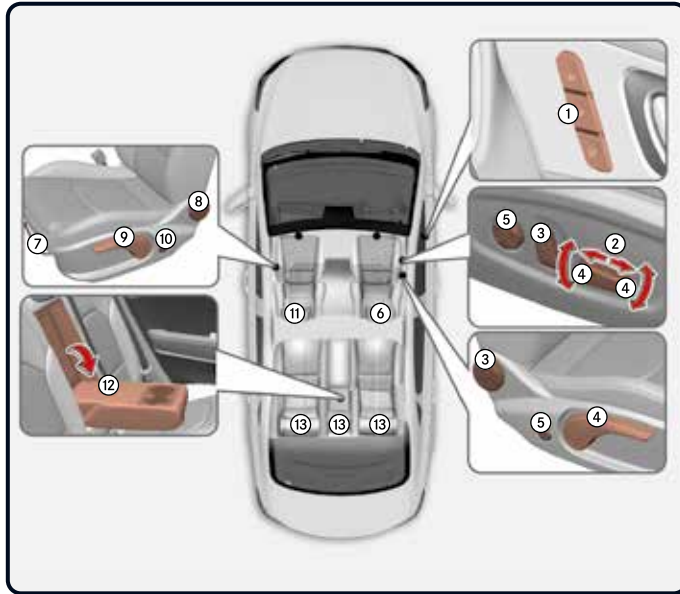

Driver's seat

- ① Driver position memory system*
- ② Forward and backward
- ③ Seatback angle
- ④ Seat cushion height
- ⑤ Lumbar support*
- ⑥ Headrest

Front passenger's seat

- ⑦ Forward and backward
- ⑧ Seatback angle
- ⑨ Seat cushion height
- ⑩ Lumbar support*
- ⑪ Headrest

Rear seat

- ⑫ Armrest*
- ⑬ Headrest

Seats [3]



Passenger's front air bag ON/OFF switch [3]




Rearward-facing child restraint system [3]



Installing a child restraint system by lap/shoulder belt [3]



Securing with "ISOFIX" system and "Top-tether Anchorage" system [3]

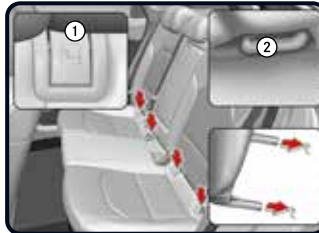

- ① ISOFIX (i-Size) Anchor Position Indicator (📍)
- ② ISOFIX (i-Size) Anchor




Securing with "Top-tether Anchorage" system [3]

Lighting Control / Steering Wheel / Cruise Control System



Lighting control [4]

- ① OFF
- ② Auto light
- ③ Position light
- ④ Headlight

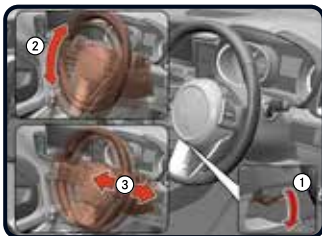

Tilt & telescopic steering [4]

Steering wheel adjustment:

- ① Pull down the lock release lever
- ② Adjust the steering wheel to the desired angle
- ③ Height adjustment

Lock the steering wheel by pulling up the lock release lever.



Heated steering wheel* [4]

When the ignition switch or ENGINE START/STOP button is in the ON position, pressing the heated steering wheel button warms the steering wheel. The indicator on the button will illuminate. To turn off the heating function, press the button once again.



Cruise control system* [6]

- ① Cruise indicator
- ② Set speed




To set cruise control speed press the Driving Assist button at the desired speed




To increase cruise control set speed push the + switch up



To decrease cruise control set speed push the - switch down

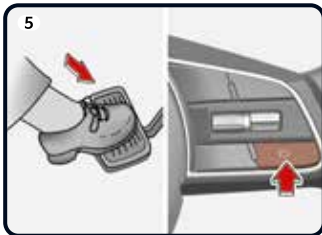

Cancel cruise control set speed by depressing the brake pedal or pressing the ||O button

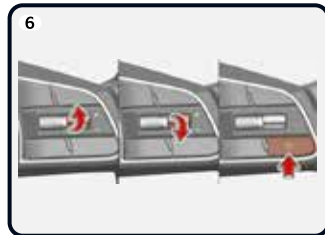


To resume cruising speed press the ||O button

Towing / Jack And Tools / Tyre Mobility Kit

Towing [7]

When towing the vehicle in an emergency without wheel dollies:

1. Set the ignition switch in the ACC position.
2. Place the transmission shift lever in N (Neutral).
3. Release the parking brake.

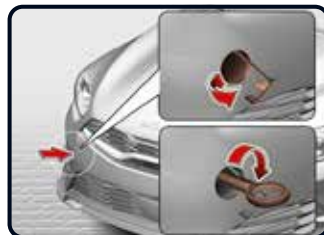

Emergency towing

If emergency towing is necessary, we recommend having it done by an authorized Kia dealer or a commercial tow-truck service.

⚠ CAUTION

Failure to place the transaxle shift lever in N (Neutral) may cause internal damage to the transaxle.



Removable towing hook* [7]

1. Open the tailgate and remove the towing hook from the tool case.
2. Remove the hole cover by pressing the upper part of the cover on the bumper.
3. Install the towing hook by turning it clockwise into the hole until it is fully secured.
4. Remove the towing hook and install the cover after use.



Jack and tools* [7]

The shown tools are stored in the luggage compartment. Pull up the luggage box cover to reach this equipment.

- ① Jack handle
- ② Jack
- ③ Wheel lug nut wrench



Tyre Mobility Kit* [7]

Please read the instructions before using the Tyre Mobility Kit.

- ① Compressor
- ② Sealant bottle




With the Tyre Mobility Kit (TMK) you stay mobile even after experiencing a tyre puncture. After you ensure that the tyre is properly sealed you can drive cautiously on the tyre (up to 200 km (120 miles)) at a max. speed of 80 km/h (50 mph) in order to reach a vehicle or tyre dealer to have the tyre replaced.

Engine Oil / Washer Fluid / Additional Info




Checking the engine oil level [8]

1. Be sure the vehicle is on level ground.
2. Start the engine and allow it to reach normal operating temperature.
3. Turn the engine off, remove the oil filler cap and pull the dipstick out. Wait for 15 minutes for the oil to return to the oil pan.
4. Wipe the dipstick clean and reinsert it fully.
5. Pull the dipstick out again and check the level. Check if the oil level is between the F-L line, and if it is below the L line, add enough oil to bring the level to F line.

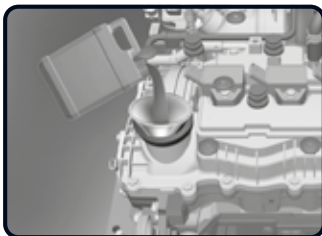

Refilling engine oil [8]

Use a funnel to help prevent oil from being spilled on engine components.
Use only the specified engine oil [9].

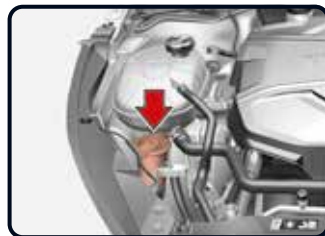

Checking the washer fluid level [8]

Check the fluid level in the washer fluid reservoir and add fluid if necessary. Plain water may be used if washer fluid is not available.
However, use washer solvent with antifreeze characteristics in cold climates to prevent freezing.

Additional Info*

Idle Stop & Go (ISG)

When enabled, ISG automatically stops the car's engine to reduce fuel consumption and emissions. The ISG function may not work if the car's battery charge status, ambient temperature and/or engine temperature is too low. Air conditioning/heater control settings may also affect ISG function.

Parking brake (handbrake)

When engaging the parking brake, apply the footbrake first and keep it depressed. Then apply the parking brake.

We strongly recommend to leave the car in first or reverse gear or in the 'P' (Park) position on automatics when leaving the car.

Kia Service App

The Kia Service App - now available for free on iPhone/iPad and Android. With the Kia Service App, you have (almost) all Kia dealers in Europe within reach*. Looking for a showroom or just a service, the app displays all dealers around your current location on the map. With one click you can call a dealer, visit their website or get directions to the showroom.

(* In selected markets only)



For full details and instructions on any item contained in this quick reference guide, please read the Owner's Manual.